

WARRANTY CARD

This Lee Star Chopper is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of twelve months from the date of purchase. Should any defect develop in this product, the customer should bring the product along with this warranty card to nearest authorized service centre, where the company undertakes to get the product repaired.

Warranty is not valid if

- The use and care instructions have not been followed
- Defects are caused by accident, misuse, faulty handling, commercial use or damage in transit.
- Plastic parts are not covered under this warranty
- The repair work is carried out by persons not authorised by the company
- Any modification or alteration of any nature is made to the product
- Normal wear & tear of the product is not covered under warranty
- The bill/cash memo and copy of warranty card is not presented
- Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages
- Use of product indicates acceptance by you of the above said terms and conditions.

REF NO.: _____

PRODUCT NAME: _____ MODEL NO.: _____

BILL NO. & DATE: _____

OWNER'S NAME & ADDRESS: _____

DEALER'S STAMP & SIGNATURE

Lee Star International

2963, Vasant Vihar, Near Industrial Estate, Ambala City-134003, Haryana (INDIA)

Helpline: +91-171-254 5555 Email: customercare@leestarindia.com

Website: www.leestarindia.com

LEE STARTM


Stainless Steel Chopper

LE-801 / LE-801PLUS



Quick 'n' Easy Chopping

IDENTIFY YOUR CHOPPER LE-801 / LE-801 PLUS

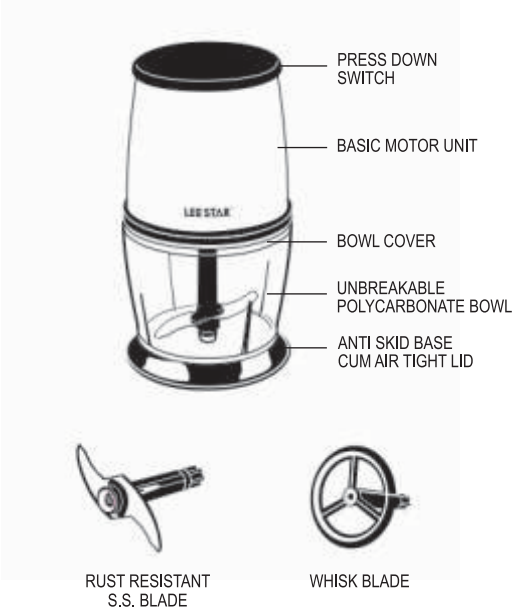

SPECIFICATIONS*

Voltage	:	230 V AC 50 Hz
Power	:	250 W
Rating	:	2 Minutes
Material (Motor Unit)	:	A.B.S.
(Bowl)	:	Poly Carbonate
Speed Control	:	PRESS DOWN - SINGLE SPEED
Weight	:	0.9 kgs approx
Capacity	:	700 ml Max (depends on ingredients)

*Subject to change without prior notice.

Instantly chops vegetables like onions, tomatoes, beans, cabbage; herbs and spices, nuts and other ingredients. Whisks eggs and batters, mashes baby food like banana and apple. Also makes fresh chutneys and dips.

HOW TO USE

ASSEMBLING THE UNIT

1. Remove all packaging materials before using.
2. Wash lid, blade and bowl in warm soapy water; rinse and dry thoroughly.
3. Clean the basic motor unit with a soft damp cloth.
4. Place the bowl on a flat surface.
5. Slide the chopping blade down over the shaft in the bowl.
6. Place the motor unit on top of the bowl.

CHOPPING

1. Remove the motor unit. Let the blade remain in the bowl.
2. Wash and cut food into approximately 1.5 cm (1/2 inch) pieces and place up to 3 cups of dry food in the bowl at a time and cover the bowl with bowl cover.
3. Place the motor unit on the bowl.
4. Plug the cord into an outlet. Press the press down switch for 5-10 seconds and then release; the motor will stop. Repeat for a finer consistency.
5. When the chopping is over, allow chopping blade to stop rotating before removing contents.
6. Use the bowl lid for air-tight storage

CARE AND CLEANING

This appliance should be cleaned after every use.

1. Unplug the chopper when not in use and before cleaning. Never immerse the base, plug or cord in water or other liquids. Allow the chopping blade to stop rotating before disassembling.
2. Wash the bowl, lid and chopping blade in warm soapy water. Rinse and dry thoroughly.
NOTE: Bowl and lid can also be placed in the dishwasher.
CAUTION: Blades are sharp! Handle with care.
3. To clean the basic motor unit, wipe the exterior with a damp cloth or sponge. Dry thoroughly with a soft cloth.

PACKING LIST

LE-801:

Basic Motor Unit, Bowl (1 no.), Bowl Cover, SS Blade, Whisk Blade, Anti Skid Base cum Air-tight Lid, User's Guide.

LE-801 PLUS:

Basic Motor Unit, Bowls (2 no.), Bowl Cover, SS Blade, Whisk Blade, Anti Skid Base cum Air-tight Lid, User's Guide.