

WARRANTY CARD

This Lee Star Appliance is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of two years from the date of purchase. Should any defect develop in this product, the customer should bring the product along with this warranty card to nearest authorized service centre, where the company undertakes to get the product repaired.

Warranty is not valid if

- The use and care instructions have not been followed
- Defects are caused by accident, misuse, faulty handling, commercial use or damage in transit.
- Plastic parts are not covered under this warranty
- The repair work is carried out by persons not authorised by the company
- Any modification or alteration of any nature is made to the product
- Normal wear & tear of the product is not covered under warranty
- The bill/cash memo and copy of warranty card is not presented
- Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages
- Use of product indicates acceptance by you of the above said terms and conditions.

REF NO.: _____

PRODUCT NAME: _____ MODEL NO.: _____

BILL NO. & DATE: _____

OWNER'S NAME & ADDRESS: _____

DEALER'S STAMP & SIGNATURE

Lee Star International

2963, Vasant Vihar, Near Industrial Estate, Ambala City-134003, Haryana (INDIA)


Helpline: +91-171-254 5555 Email: customercare@leestarindia.com

Website: www.leestarindia.com

LEE STARTM

Stainless Steel Blender Grinder


LE-802 / LE-803 / LE-804

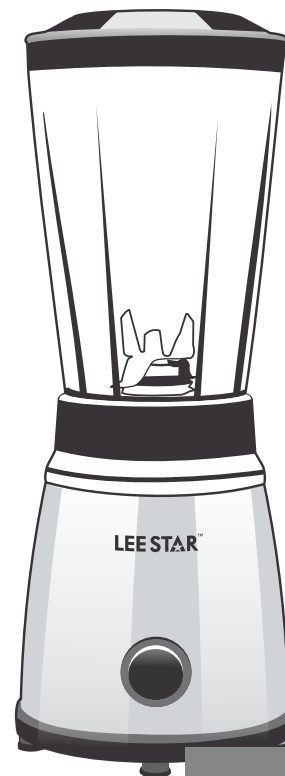

A Fusion of Power & Style

IDENTIFY YOUR BLENDER GRINDER

LE-802 (Blender Grinder) / LE-803 (Blender) / LE-804 (Grinder)

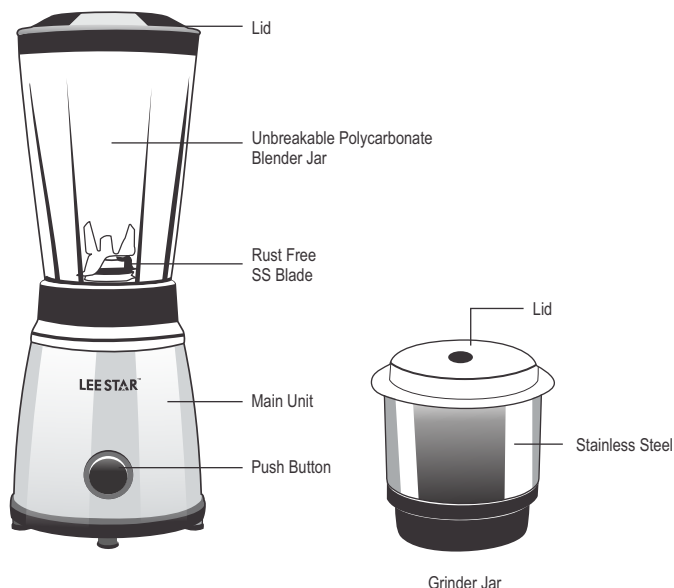

SPECIFICATIONS*

Voltage	: 230 V AC 50 Hz
Power	: 400 W
Rating	: 2 Minutes
Material (Motor Unit)	: A.B.S.
Blender Jar	: Poly Carbonate
Grinder Jar	: Stainless Steel
Speed Control	: PUSH SWITCH - SINGLE SPEED
Capacity - Blender Jar	: 750 ml Max (depends on ingredients)
- Grinder Jar	: 100 ml Max (depends on ingredients)

*Subject to change without prior notice.

HOW TO USE

ASSEMBLING THE UNIT

1. Remove all packaging materials before using.
2. Wash lid and jars in warm soapy water; rinse and dry thoroughly.
3. Clean the basic motor unit with a soft damp cloth.
4. Place the blender / grinder jar on the main unit and rotate clockwise to lock in position.

BLENDING, GRINDING (WET & DRY)

1. Put the ingredients in the jar.
2. Take care to fill the ingredients only upto 2/3 of the jar capacity.
3. Place the lid on the jar and keep your hand on it.
4. Press the push button and keep it pressed for a short duration as per desired consistency.
5. The blender jar is perfect for baby food. It is great for smoothies, shake and mocktails. You can also prepare fresh butter milk & frappe.
6. Remove the stems and skin of fruits / vegetables and cut them into small pieces before adding them to the blending jar.
7. The grinder jar can be used for dry grinding of spices like jeera, dhania, dalchini, nuts and also coffee beans for a fresh flavour.
8. The grinder jar can also be used for making, fresh chutneys, sauces or dips.
9. It is important to ensure that the jar is fully dry and has no humidity, before proceeding for dry grinding.

CARE AND CLEANING

This appliance should be cleaned after every use.

1. Unplug the appliance when not in use and before cleaning. Never immerse the base, plug or cord in water or other liquids. Allow the blade to stop rotating before disassembling.
2. Wash the jars and lid in warm soapy water. Rinse and dry thoroughly.
NOTE: Polycarbonate jar and lid can also be placed in the dishwasher.
CAUTION: Blades are sharp! Handle with care.
3. To clean the basic motor unit, wipe the exterior with a damp cloth or sponge. Dry thoroughly with a soft cloth.

PACKING LIST

LE-802: Basic Motor Unit Polycarbonate Blender Jar, Stainless Steel jar, Lid (2 no.), User's Guide.	LE-803: Basic Motor Unit Polycarbonate Blender Jar, Lid, User's Guide.	LE-804: Basic Motor Unit Stainless Steel Jar, Lid, User's Guide.
--	--	--