

LEE STARTM

INSTRUCTION MANUAL

SANDWICH/GRILL MAKER

MODEL: LE-816



IMPORTANT SAFEGUARDS

• READ ALL INSTRUCTIONS

- Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
- Use only for household.
- Do not touch hot Plates surfaces. Use handle.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
- Do not operate any appliance with a damaged has malfunctioned or has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the Sandwich Maker yourself. Take it to an authorized service station for examination and repair. An incorrect reassembly could present a risk of electric shock when the Sandwich Maker is used.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- Do not use outdoors or for commercial purposes.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Do not intend to operated by means of an external timer or separate remote-control system.
- Unplug the unit when finished using.
- Extreme caution must be exercised when moving an appliance.

PARTS IDENTIFICATION



1. Handle
2. SUS Ornament Sheet
3. Power Light
4. Ready Light
5. Non-stick Cooking Plates
6. Bottom Housing
7. Handle Lock

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging
- Clean the Cooking Plates by wiping a sponge or cloth dampened in warm water.

DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ON THE COOKING SURFACES.

- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

Notice: When your Sandwich Maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

HOW TO USE

- Close the Sandwich Maker and plug it into the wall outlet, you will notice that the power and ready light will come on, indicating that the Sandwich Maker has begun preheating.
- It will take approximately 2~3 minutes to reach baking temperature, the ready light will go off.
- Open the lid, put the meat or other foods on the bottom cooking plate.
- Close the lid. The ready light will go on again.
- Cook for about 2 to 4 minutes, the ready light goes off again, or until golden brown, adjusting the time to suit your own individual taste.
- When the foods are cooked use the handle to open the lid. Remove the foods with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cook plates.
- Once you are finished cooking, disconnect the plug from the wall outlet and leave unit open to cool.

CLEANING AND CARE

- Always unplug the Sandwich Maker and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble Sandwich Maker for cleaning. Never immerse the Sandwich Maker in water or place in dishwasher.
- Wipe cooking plates with a soft cloth to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non-abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue.
- Do not use any abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- Wipe the outside of the Sandwich Maker with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.
- Remove and empty the drip tray after each use and wash the tray in warm, soapy water. Avoid the use of scouring pads or harsh detergents as they may damage the surface. Rinse and dry thoroughly with a clean, soft cloth and replace.

STORAGE

- Always unplug the Sandwich Maker before storage.
- Always make sure the Sandwich Maker is cool and dry before storing.

The Lee Star Sandwich Grill is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of 1 year from the date of purchase. Should any defect develop in this product, the customer should bring the product to nearest service provider, where the company undertakes to get the product repaired.

The warranty is not valid if:

- The use and care instructions have not been followed
- Defects are caused by accident, misuse, faulty handling or commercial use
- The repair work is carried out by persons not authorised by the company
- Any modification or alteration of any nature is made in the product
- Normal wear & tear of the product is not covered under warranty
- The bill/cash memo and copy of the warranty card is not presented
- Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages
- Use of the product indicated acceptance by you of the above said terms & conditions.

REF NO.: _____

PRODUCT NAME: _____

BILL NO. & DATE: _____

OWNER'S NAME & ADDRESS: _____

DEALER'S STAMP & SIGNATURE

Imported & Marketed By :-Lee Star International
2963, Vasant Vihar, Near Industrial Area, Ambala City, Haryana,India
In case of any customer complaints, please contact:-
Customer Care No. :+91-8950408545
Email:customercare@leestarindia.com. Webiste:www.leestarindia.com